



# Verizon Ellipsis Jetpack MHS800L Screen Replacement

This guide will show the user how to replace the LCD screen on your Verizon Ellipsis Jetpack MHS800L

Written By: Richard J Porras



## INTRODUCTION

What you can expect from this guide is a step by step process on how to remove the LCD display screen on a Verizon Ellipsis Jetpack MHS800L.


---



### TOOLS:

- [Tweezers - Pro ESD Pointed](#) (1)  
Pointed
  - [64 Bit Driver Kit](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-

## Step 1 — Plastic Case

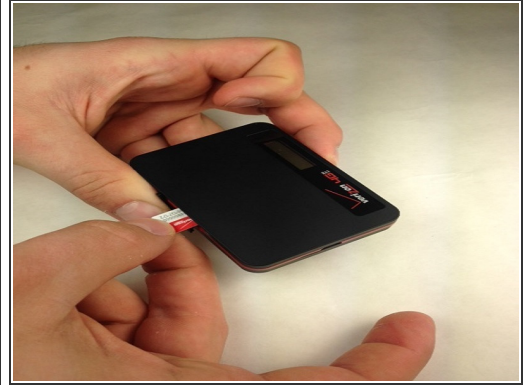

- Remove the SIM card, that is located on top of the Jetpack.

## Step 2



- With the device on its back and the label facing you, remove the rubber screw cover on the top left corner of the device.
- Under the rubber circle, remove the 1.25 mm screw using a Philips #00 screwdriver.

## Step 3



- Remove three 1.25 mm screws.


## Step 4



- Use a plastic opening tool at the seams and pry open the case.



## Step 5

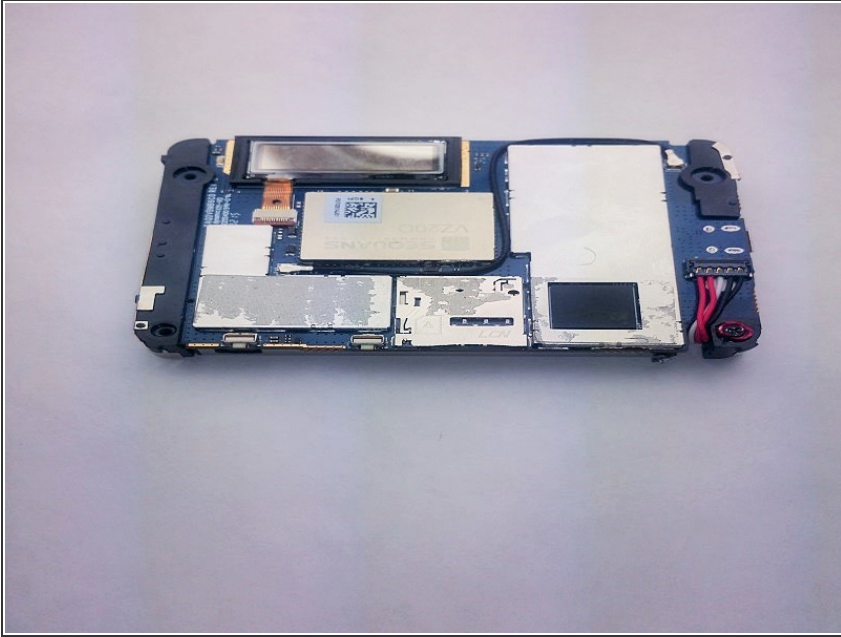

- Once the cover is off, this is what your device will look like.


## Step 6 — Battery



- Once you have the case off of your device gently pull your battery away from the device.


⚠ Do not attempt to completely remove the battery, as it is still attached to the motherboard by wires.

## Step 7

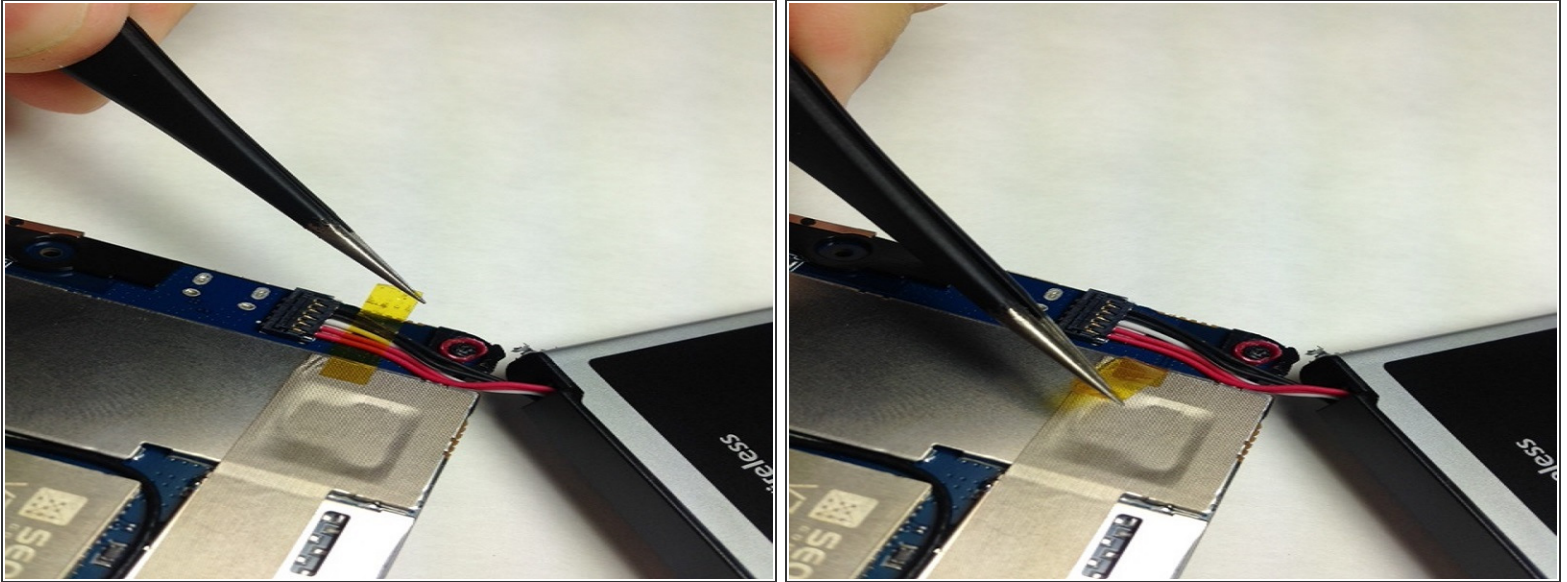


- With a pair of ESD Tweezers remove the yellow tape covering the battery wires.


## Step 8

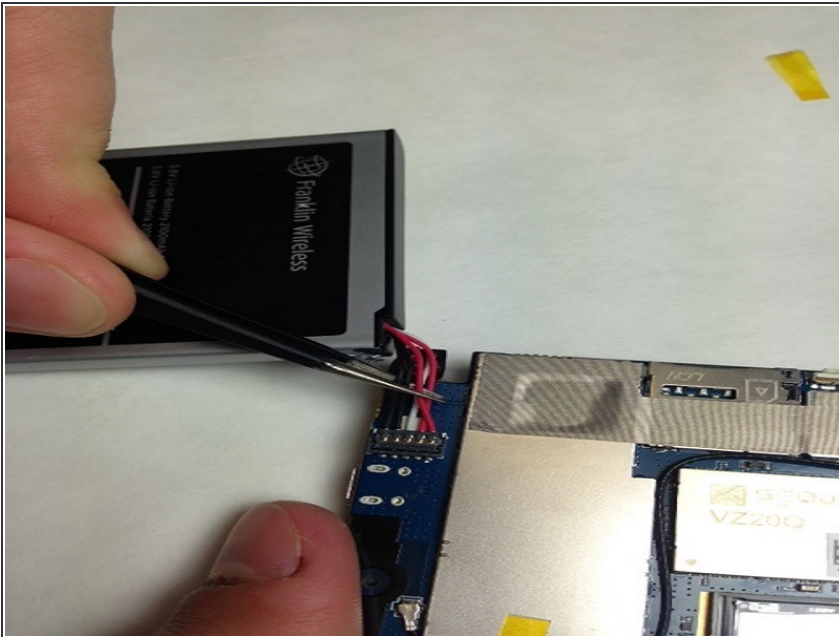

- After removing the tape you may use the ESD Tweezers to remove the wiring harness from the circuit board.



 Do not squeeze the wires to hard you may damage them and cause a short.

## Step 9

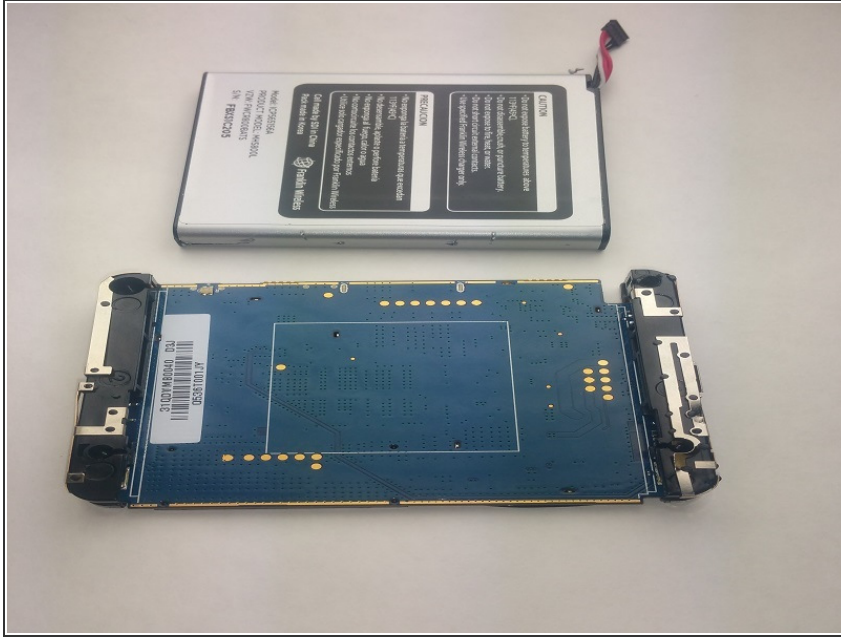

- You may now replace the battery in your Verizon Ellipsis Jetpack MHS800L.



## Step 10 — Screen

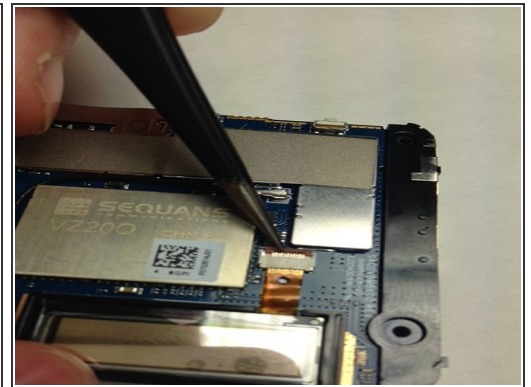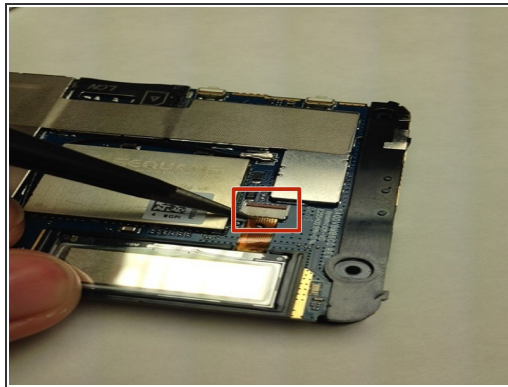

- Locate the LCD screen cable and unlatch the harness connection form the circuit board.




## Step 11

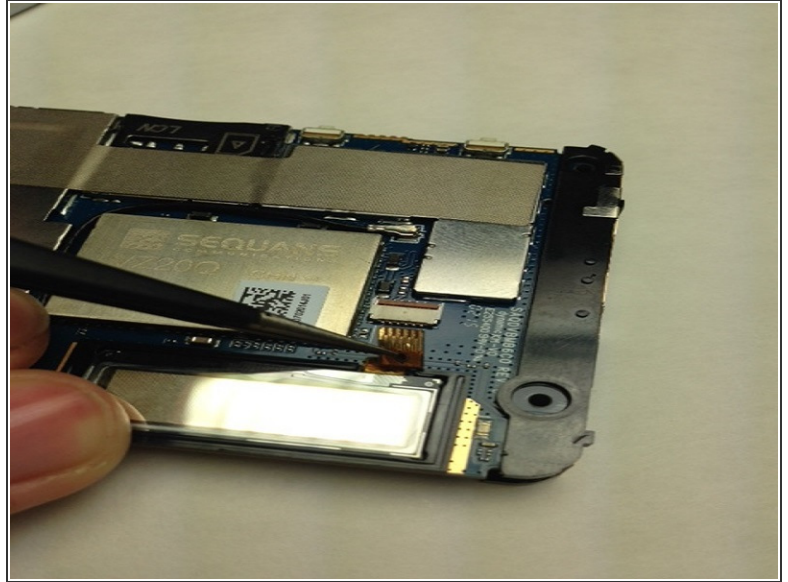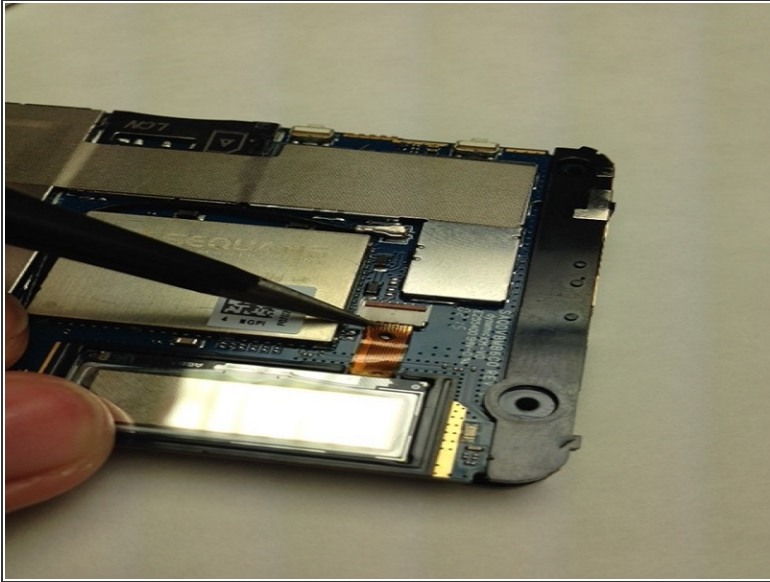

- Using the ESD Tweezers gently coax the display data cable out of circuit board connector.

⚠ Do not squeeze the display data cable too hard you may damage it and cause a short.

## Step 12

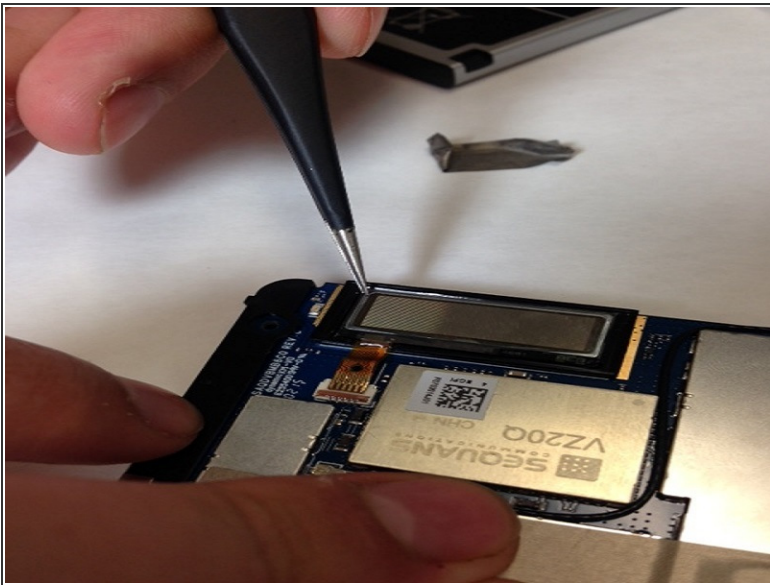

- Gently insert the ESD Tweezers underneath the LCD screen and lift the LCD screen off of the circuit board.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 01:50:50 PM.